


Installation manual for:
Peugeot 308 2007-->

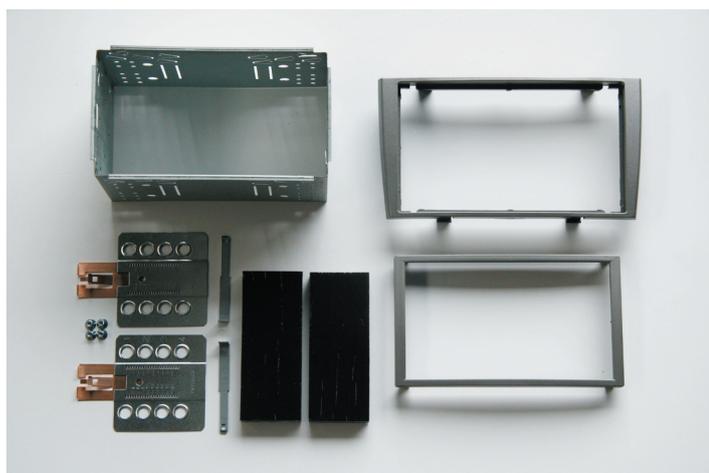

Installation kit includes the following items:


- * 1X 2-ISO 100 mm. metal bracket
- * 1X Radio trim
- * 1X Replacement Panel
- * 2X Mounting plates
- * 2X Mounting spacers
- * 2X Radio removal keys
- * 4X Screws
- * 2X Cushion



Pioneer HD1BT

We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 14 & 16 marked with an arrow.
Measured from left to right.

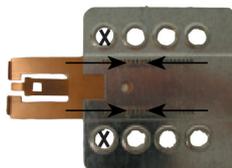

Pioneer Avic D3

We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 10 & 12 marked with an arrow.
Measured from left to right.

* Mount the plates.



Remove the ashtray and the rubber plate.



Remove the panel around the climate control.



Remove the storage bin.



Remove the OEM radio by using the original radio keys.



Remove the plastic edges at the side and the plastic trim in the middle.



Place the replacement panel and the metal bracket.
Place the original panels back in reverse order.



Place the new head unit and the radio trim.

Connect all of the needed wiring harnesses and check the connections carefully.